

Trigger Type Shifters (W/O indicator)

INSTALLATION

1. Mounting the shifter first , then brake lever and handle bar grip. See **Figure 1**.
2. Tighten shifters with 4mm Allen key.
(clockwise to tight)

ADJUSTMENT

1. Adjust the brake lever in a suitable position where it will not obstruct the brake lever operation and shift lever's shifting.
2. Press the upper lever of left shifter 2 times or more to set the lever to the lowest gear position. See **Figure 3**.
3. Press the upper lever of right shifter continuously to set the lever to the highest gear position. See **Figure 3**.
4. Connect and secure the inner cable to front or rear derailleur and make sure the chain stay in the bottom chain ring (front) or sprocket (rear) , For more detail please refer to derailleur instruction .
Adjusting barrel on shifter offer the micro-adjustment purpose if necessary .

INNER CABLE REPLACEMENT

1. Release inner cable from derailleur .
2. Press the upper lever of left shifter 2 times or more to set the lever to the lowest gear position. See **Figure 3**.
Press the upper lever of right shifter continuously to set the lever to the highest gear position. See **Figure 3**.
3. Push the inner cable out from cable hook and replace a new one. See **Figure 2**.

OPERATION

Push the lower lever of shifter to shift from a small chain ring to a larger chain ring (front) or from a small sprocket to a larger sprocket (rear).

Tap on the upper lever of shifter to shift from a larger chain ring to a smaller chain ring (front) or from a larger sprocket to a smaller sprocket (rear).
See **Figure 3**.

